

jura®



Z6 – Quick Reference Guide



For your safety: read and understand manual before use.

Z6 – Quick Reference Guide




These short instructions do not replace the 'Z6 Instructions for Use'. Make sure you read and observe the safety information and warnings first in order to avoid hazards.

WARNING

Use of maintenance products that are harmful to health and discharge of liquids during maintenance program. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Keep children away from the machine while it is performing a maintenance program.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ When using do not eat or drink.
- ▶ Keep maintenance products away from food, drink and animal food.
- ▶ Keep container tightly closed and dry. Keep in a cool place.

Rinsing the machine

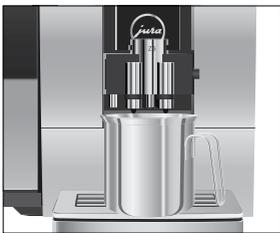

You can initiate the rinse operation manually at any time.

Precondition: 'Please select product' is displayed.

- ▶ Place a receptacle under the dual spout.
- ▶ Press the Rotary Switch.
'Maintenance status'
- ▶ Press the Rotary Switch.
'Clean'
- ▶ Turn the Rotary Switch until 'Rinse' is displayed.
- ▶ Press the Rotary Switch to initiate the rinse operation.
'Machine is rinsing', 'Milk system is being rinsed', water flows out of the dual spout. The rinse stops automatically.
'Please select product' appears on the display.

Automatic milk system rinsing

15 minutes after milk preparation, the milk system is **automatically** rinsed. Therefore always place a receptacle under the dual spout after preparing milk.

15 minutes after milk preparation, 'Milk system is being rinsed' appears, water flows out of the dual spout. The rinse stops automatically. Your Z6 is once more ready for use.

Cleaning the milk system

To ensure that the milk system in the dual spout always works properly, you must clean it **daily** when you have been preparing milk.

WARNING

Non-recommended cleaning agents will not optimally remove milk residues. This may cause the cappuccino frother to become blocked and fly off the machine. Discharge of hot steam.

- ▶ Use only original JURA milk system cleaner.

WARNING

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.


- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

 JURA milk system cleaner is available from specialized dealers.

 To clean the milk system, use the container supplied.

Precondition: 'Clean the milk system' is displayed.

- ▶ Press the Rotary Switch.
'Clean the milk system'
- ▶ Press the Rotary Switch again.
- ▶ Press the 'Start' button.
- ▶ Press the 'Start' button again.
'Cleaning agent for milk system'
- ▶ Remove the milk pipe from the milk container or carton.

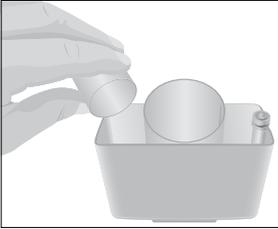


- ▶ Add 1 capful of milk system cleaner to the outer, rectangular part of the container.
- ▶ Place the container under the dual spout.




- ▶ Connect the milk pipe to the container.
- i** To connect the milk pipe to the container correctly, the pipe must be fitted with a connector.
- ▶ Slide the dual spout down to fix the container in place.
 - ▶ Press the 'Next' button.
- 'Milk system is being cleaned', the dual spout and the pipe are cleaned. Water flows out of the dual spout. The operation stops automatically. 'Milk system cleaning complete' appears briefly on the display. Your Z6 is once more ready for use.

Dismantling and rinsing the dual spout


The dual spout must be dismantled and rinsed **daily** if milk has been prepared to make sure it functions perfectly and also in the interests of hygiene.

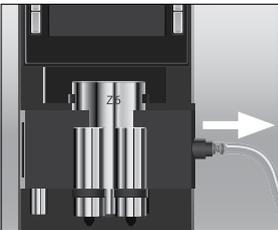


- ▶ Remove the milk pipe and rinse it thoroughly under running water.

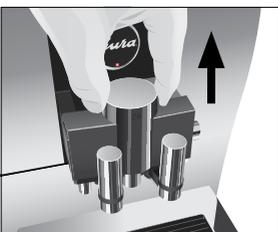


- ▶ Press the releasing devices and pull the cover of the dual spout up and off.

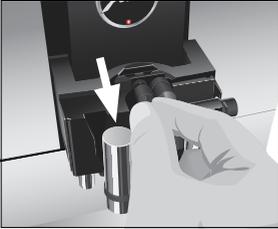


- ▶ Remove the milk system from the dual spout.

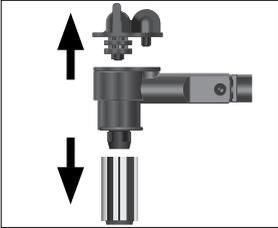


- ▶ Dismantle the milk system into its individual parts.
- ▶ Rinse all the parts under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in a solution of 8.5 oz (250 ml) cold water and 1 capful of JURA milk system cleaner. Then rinse the parts thoroughly.

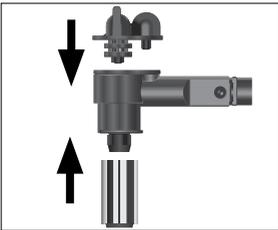


- ▶ Reassemble the milk system.

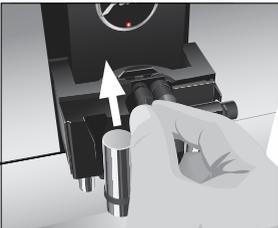

- ▶ Fit the assembled individual parts back in the dual spout and press it firmly.

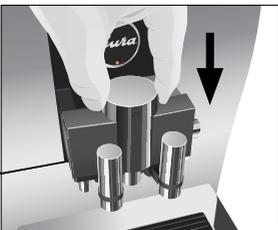

- ▶ Fit the cover of the dual spout. Make sure the cover of the dual spout is correctly fitted.

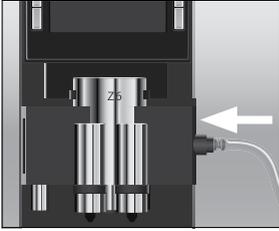

- ▶ Connect the milk pipe to the dual spout.

Inserting the filter

Your Z6 no longer has to be descaled if you are using the CLEARYL Smart filter cartridge. If you did not insert the filter cartridge the first time you used the machine, you can do this now as follows.

Precondition: 'Please select product' is displayed.

- ▶ Remove and empty the water tank.
- ▶ Fit the filter cartridge extension supplied on top of a CLEARYL Smart filter cartridge.
- ▶ Insert the filter cartridge with its extension into the water tank.
- ▶ Turn the filter cartridge clockwise until it audibly clicks into place.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.



- i** The machine automatically detects that you have just inserted the filter cartridge.

'Use filter' / 'Saved'

'Filter is being rinsed', the filter is rinsed. The water flows directly into the drip tray.

'Empty drip tray'

- ▶ Empty the drip tray and put it back into the machine.

'Use filter', 'Filter rinsing complete'

'Please select product' appears on the display. Your Z6 is once more ready for use.

Changing the filter

- i** Once the filter cartridge stops working (depending on the water hardness setting), the Z6 will prompt you to change the filter.

- i** CLEARYL Smart filter cartridges are available from specialized dealers.

Precondition: 'Change filter' is displayed.

- ▶ Press the Rotary Switch.
'Change the filter'
- ▶ Press the Rotary Switch again.
- ▶ Remove and empty the water tank.
- ▶ Turn the filter cartridge anticlockwise and remove it along with the extension from the water tank.
- ▶ Fit the filter cartridge extension on top of a **new** CLEARYL Smart filter cartridge.
- ▶ Insert the filter cartridge with its extension into the water tank.
- ▶ Turn the filter cartridge clockwise until it audibly clicks into place.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.



- i** The machine automatically detects that you have just changed the filter cartridge.

'Change the filter' / 'Saved'

'Filter is being rinsed', the filter cartridge is rinsed. The water flows directly into the drip tray.

'Empty drip tray'

- ▶ Empty the drip tray and put it back into the machine.

'Change the filter', 'Filter rinsing complete'

'Please select product' appears on the display. Your Z6 is once more ready for use.

Cleaning the machine

After 180 preparations or 80 switch-on rinses, the Z6 will prompt you to clean it.

⚠ WARNING

Non-recommended (e.g. liquid) cleaning agents may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA cleaning tablets. These are specially formulated for your machine.

⚠ WARNING

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

- i** The cleaning program lasts approximately 20 minutes.
- i** Do not interrupt the cleaning program. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialized dealers.

Precondition: 'Clean machine' is displayed.

- ▶ Press the Rotary Switch.
'Clean'
- ▶ Press the Rotary Switch again.
'Clean'
- ▶ Press the 'Start' button.
- ▶ Press the 'Start' button again.
'Empty coffee grounds container'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Press the Rotary Switch'
- ▶ Place a receptacle under the dual spout.
- ▶ Press the Rotary Switch.
'Machine is being cleaned', water flows out of the dual spout. The operation is interrupted, 'Add cleaning tablet'.
- ▶ Open the cover of the filler funnel for ground coffee.





- ▶ Insert a JURA cleaning tablet into the filler funnel.
- ▶ Close the cover of the filler funnel.
'Press the Rotary Switch'
- ▶ Press the Rotary Switch.
'Machine is being cleaned', water flows out of the dual spout repeatedly.
The operation stops automatically.
'Empty coffee grounds container'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Please select product' appears on the display. Cleaning is now complete.

Descaling the machine

The Z6 builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

- i** If you are using a CLEARYL Smart filter cartridge, you will not be prompted to descale.

⚠ WARNING

Non-recommended descaling agents (e.g. vinegar) may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA descaling tablets. These are specially formulated for your machine.

⚠ WARNING

Harmful and irritating descaling agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water. Remove contact lenses. Seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.


NOTICE If the descaling operation is interrupted, there may be damage to the machine.

- ▶ Allow the descaling program to run to the end.

- i** The descaling program lasts approximately 45 minutes.
- i** JURA descaling tablets are available from specialized dealers.
- i** If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out. Clean up any splashes immediately.

Precondition: ‘Decalcify machine’ is displayed.

- ▶ Press the Rotary Switch.
‘Descal’
- ▶ Press the Rotary Switch again.
‘Descal’
- ▶ Press the ‘Start’ button.
- ▶ Press the ‘Start’ button again.
‘Empty drip tray’
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
‘Pour descaling agent into water tank’
- ▶ Remove and empty the water tank.
- ▶ Completely dissolve the contents of one blister (3 JURA descaling tablets) in a receptacle holding 20 oz (600 ml) of lukewarm water. This may take several minutes.
- ▶ Pour the solution into the empty water tank and insert it into the machine.
‘Press the Rotary Switch’
- ▶ Place a receptacle under the hot water spout.
- ▶ Press the Rotary Switch.
‘Machine is being descaled’, water flows out of the hot water spout repeatedly.
The operation is interrupted, ‘Empty drip tray’.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
‘Fill water tank’
- ▶ Empty the receptacle and place it under the hot water and dual spouts.

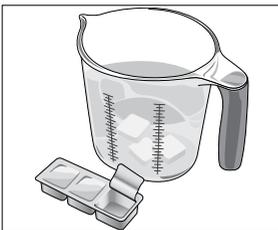

- ▶ Remove the water tank and rinse it thoroughly.
 - ▶ Fill the water tank with fresh, cold water and reinsert the tank.
'Press the Rotary Switch'
 - ▶ Press the Rotary Switch.
'Machine is being descaled', the descaling operation is continued, water flows out of the dual spout and the hot water spout.
'Empty drip tray'
 - ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Please select product' appears on the display. Descaling is now complete.
- i** If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Descaling the water tank

Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- ▶ Remove the water tank.
- ▶ If you use a CLEARYL Smart filter cartridge, remove this.
- ▶ Completely fill the water tank and dissolve 3 JURA descaling tablets in it.
- ▶ Leave the water tank with the descaling solution for several hours (e.g. overnight).
- ▶ Empty the water tank and rinse it thoroughly.
- ▶ If you use a CLEARYL Smart filter cartridge, insert this again.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean container. These traces may negatively affect the coffee result. For this reason clean the bean container from time to time.

Precondition: **'Fill bean container'** is displayed.

- ▶ Switch the machine off with the On/Off button .
- ▶ Remove the aroma preservation cover.
- ▶ Clean the bean container with a soft, dry cloth.

Z6 – Quick Reference Guide

- ▶ Fill the bean container with coffee beans and close the aroma preservation cover.